

**F L U I D** <sup>TM</sup>  
MC

8010275



# **2.0 Wall Mount TV Soundbar**

**Instruction Manual**

Read all of the instructions before using this soundbar and keep the manual in a safe place for future reference.

 
# Safety Information

---



To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

## Important Safety Instructions

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacture’s instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.



- 
- 
- Please keep the unit in a well-ventilated environment.
  - **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
  - The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
  - **WARNING:** The wall socket plug is used as disconnect device, the disconnect device shall remain readily operable.
  - **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

## The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

CAN ICES-3(B).

# Safety Information

---

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

## ***Electrical safety***

- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm or when not using the television for long periods, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside.

Trying to service the unit yourself is dangerous and may invalidate the product's warranty.

Only qualified personnel should service this apparatus.

## ***Physical safety***

- To clean - use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.

# Contents

---

Important Safety Instructions.....	2
Safety Information.....	4
Table of contents.....	5
Getting Started.....	6
Features.....	6
What's Included.....	6
Product Components.....	7
Front Panel.....	7
Rear Panel.....	7
Remote Control.....	8
Installation.....	9
Placing the Main Unit.....	9
Positioning the Soundbar System.....	10
Wall Mounting.....	11
Connections.....	12
Connection Overview.....	12
Connecting TV.....	13
Connecting to TV using Optical input.....	13
Connecting to TV using AUX input.....	14
Connecting to MP3 player using AUX input.....	15
Operation.....	16
Turn Off the Sound Temporarily.....	16
Selecting a Soundbar Input Mode.....	17
Adjusting Volume.....	18
Troubleshooting.....	20
Specifications.....	21
Limited Warranty.....	22

# Getting Started

---

## *Features*

**2.0 Channel Built-In Digital Amplifier**  
**Easy Installation, More Vivid Sound and Image**

**Stylish and Low Profile Design**  
**Soundbar system in a stylish integrated single-unit design**  
**Low profile design that can be placed below or mounted above any flatscreen TV**

## What's Included

### MAIN UNIT



**REMOTE CONTROL**



**BATTERY**  
(1 ea)



**RCA CABLE**



**AC POWER CORD** (1 ea)



**WALL-MOUNTING BRACKET** (1 ea)



 
**USER MANUAL**  
(1 ea)

# Product Components

---

## Front Panel

1. **Display LED**  
Shows the current status of the main unit
2. **Remote Sensor**  
Indicates where remote should be pointed

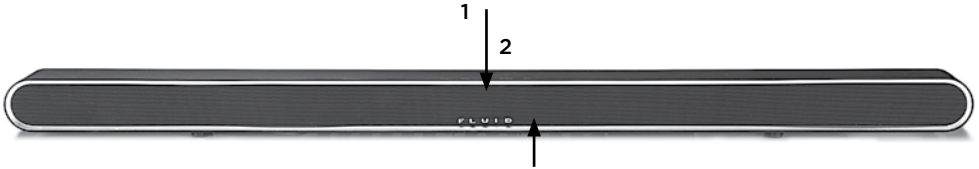


## Rear Panel

1. **SOURCE 1 (Optical)**  
Connect to the Optical (S/PDIF) output jack of a digital optical audio device.
2. **RCA IN**  
Connect to the RCA input jack of the TV
3. **AC IN**  
Connect to the electrical outlet




 4. **MOVIE**  
Indicates preset listening mode optimized for Movie content
5. **MUSIC**  
Indicates preset listening mode optimized for Music content
6. **VSS Indicator LED**  
Indicates the Virtual Surround System mode
7. **Optical Indicator LED**  
Indicates SPDIF (OPTICAL) connection mode
8. **RCA Indicator LED**  
Indicates RCA connection mode

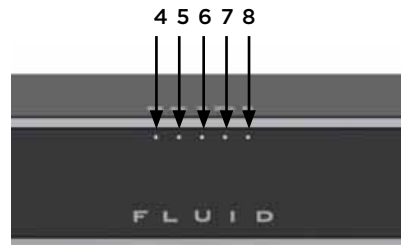

# Remote Control

 ---

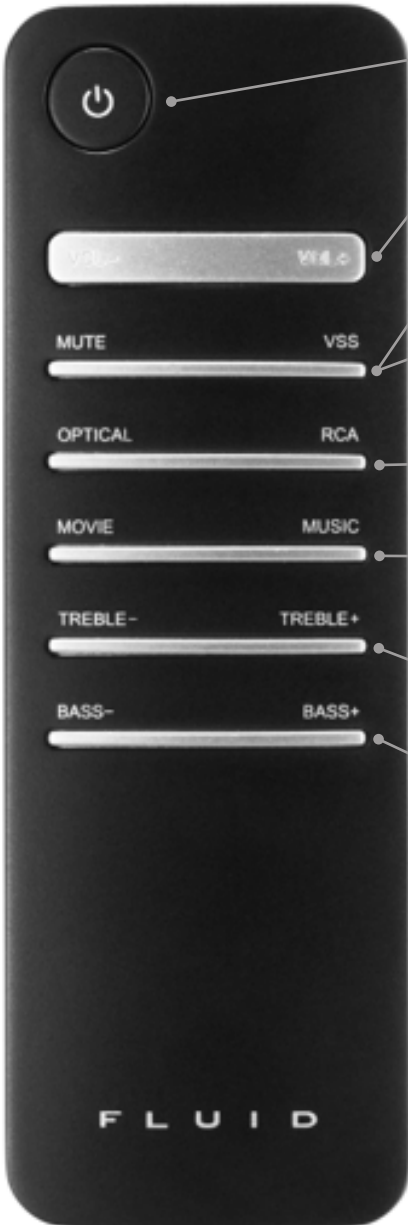

- 1. Power**  
Turns the main unit ON or OFF.
- 2. VOL - / VOL +**  
Adjusts the speaker volume.
- 3. MUTE**  
Mutes the sound.
- 4. VSS**  
Switches Virtual Surround System mode ON or OFF.
- 5. OPTICAL / RCA**  
Selects audio input mode.
- 6. MOVIE / MUSIC**  
Selects the preset mode for movie or music
- 7. TREBLE - / TREBLE +**  
Adjusts the treble volume.
- 8. BASS - / BASS +**  
Adjusts the bass volume.




# Installation

 ---

## *Placing the Main Unit*

### **ON A SHELF**

1. No assembly is required for main unit installation. Simply place the main unit on a flat surface of a shelf or a stand centered below the TV. For best sound experience, the soundbar should be placed close to ear level.

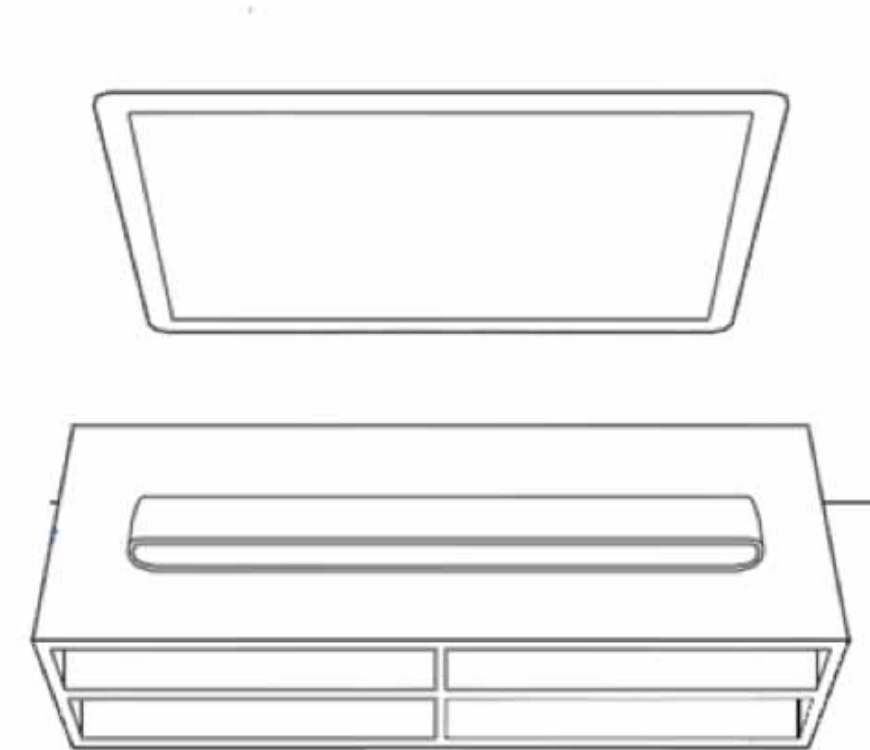


# Installation

---

## *Positioning the Soundbar System*

 1. Place the main unit at a height that is closest to ear-level in the listening area.
2. Position the main unit so that it is parallel to the listening area.

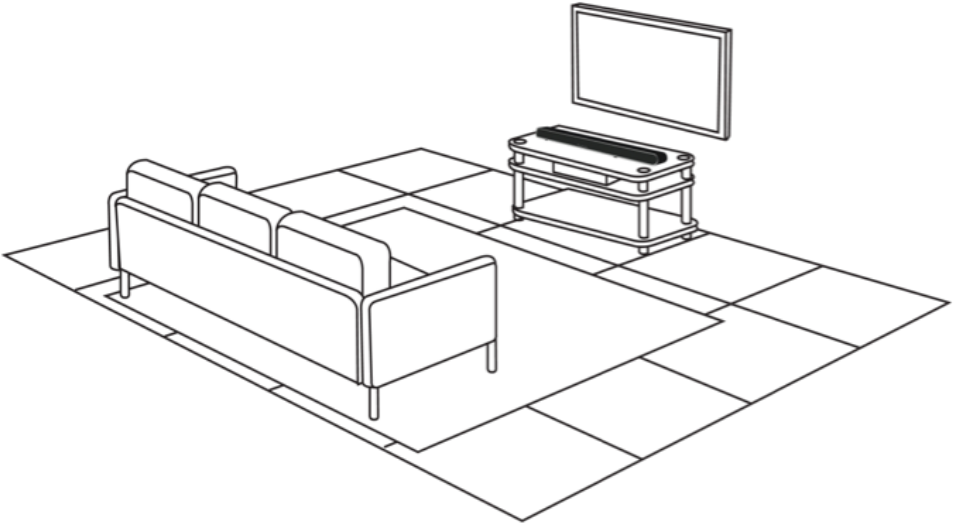

### **Note:**

- Make sure not to place the main unit in an enclosed cabinet.
- Make sure to place the main unit on the top of a table to prevent sound distortion

# Installation

---

## **WALL MOUNTING**


The soundbar can also be mounted on the wall

### **Option 1: Attaching Soundbar directly to the wall**

1. Attach the supplied wall mount sheet to the wall as level (horizontal) as possible.
2. Mark the screw/nail holes on the wall.
3. Remove mounting template.
4. Use mounting hardware included to attach soundbar directly to wall.

### **Option 2: Attaching Soundbar to wall using Mounting Bracket**

 1. DO NOT USE MOUNTING TEMPLATE.
2. Attach mounting bracket directly to wall using mounting hardware included.
3. Attach soundbar to mounting bracket.

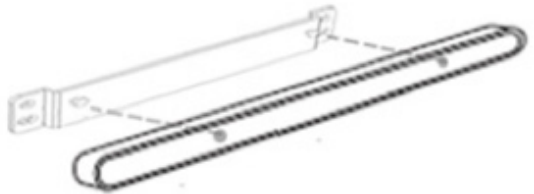


# Connections

---

## ***Connections Overview***

You can enjoy music or movies with one of the following connections.

 1. Find an external device you want to connect to the main unit as shown in the following images.
2. Check the connection type of the external device.
3. Find the appropriate image and check the connection details.

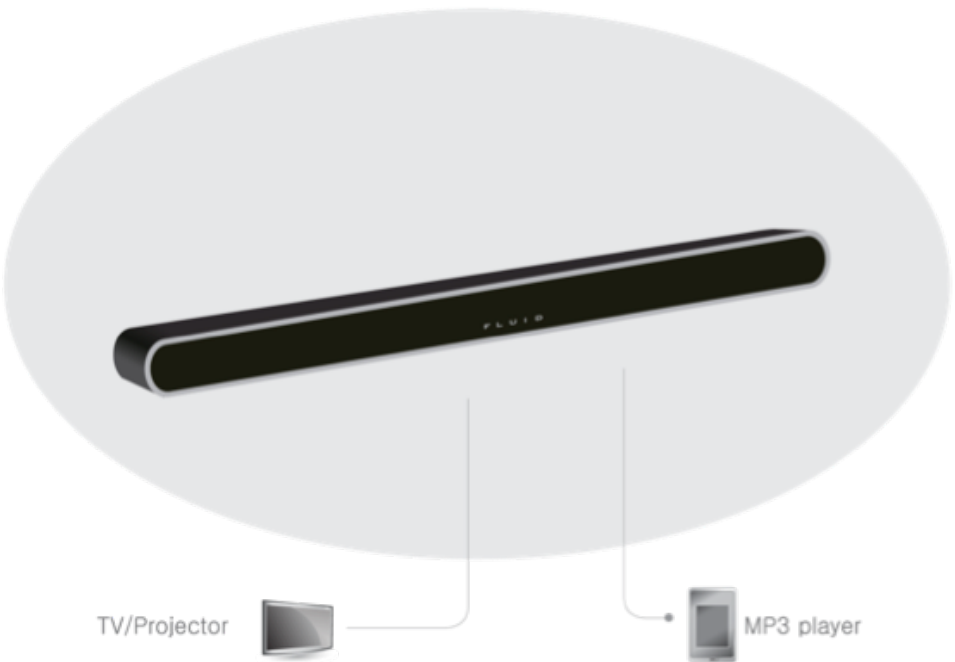

### **Note:**

- Before connecting or changing any connections, make sure that all the devices are disconnected from the power outlet.

 
# Connecting to TV

---

## ***Connecting to TV using Optical input***

You can enjoy the sound from your display device with a digital optical connection through your soundbar.

1. Connect the optical audio output of your device into the SOURCE 1 (Optical) on the main unit.
2. Turn on the connected devices.
3. Press Optical key on the remote control to select optical audio input on the soundbar.

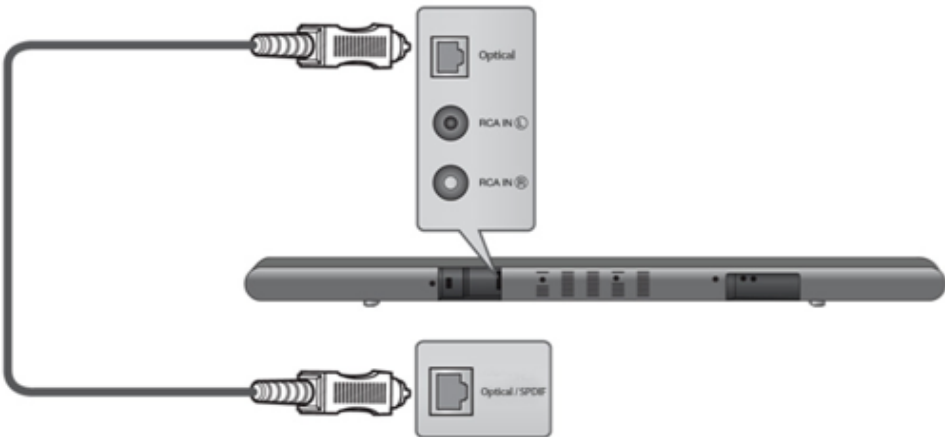


# Connecting to TV

---

## ***Connecting to TV using RCA input***

 1. Connect the AUDIO OUT from the display device with the RCA IN on the main unit.
2. Turn on the connected devices.
3. Press RCA key on the remote control to select RCA input on the soundbar.

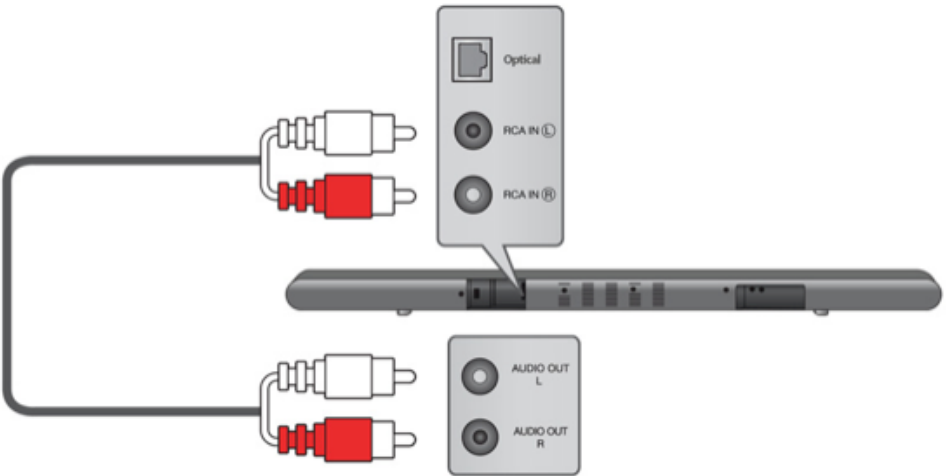


# Connecting to TV

---

## **Connecting to MP3 player using RCA input**

You can enjoy the sound from your display device with a digital optical connection through your soundbar.

 1. Using the RCA adaptor (not included in the package), connect the RCA cable into headset jack of the MP3 player and connect the other end to the RCA IN on the main unit
2. Turn on the connected devices.
3. Press RCA key on the remote control to select RCA input on the soundbar. audio input on the soundbar.

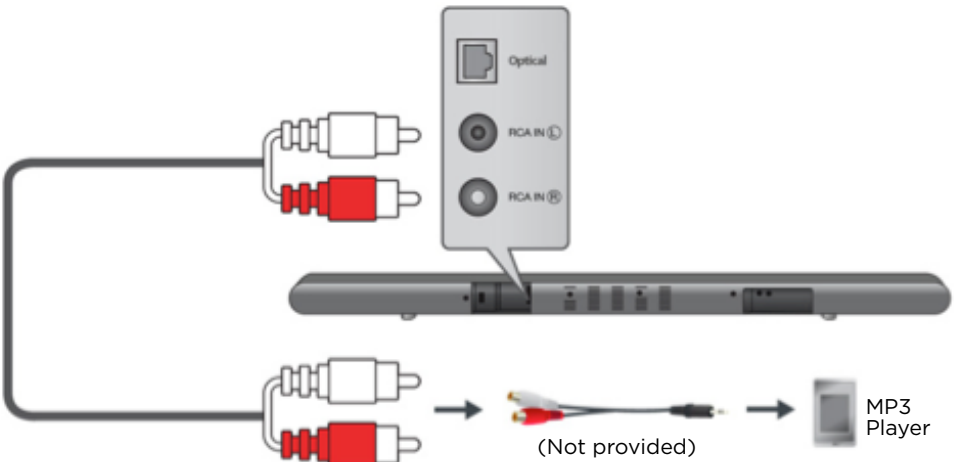

# Operation

---

## ***Setting the Sound Mode***

You can enable VSS (Virtual Surround System) mode that will provide listeners with virtual 5.1 channel audio system experience through 2.1 channel audio system with the aid of digital sound processing

## **Turning Off the Sound Temporarily**

You can mute the sound temporarily using MUTE.

1. Press MUTE to turn off the sound.
2. Check the connection type of the external device.
3. Press MUTE or VOL + / VOL - to turn on the sound.



# Operation

---

## ***Selecting a Soundbar Input Mode***

Your soundbar acts as a device for switching between all the input sources that are plugged into it.

### **On the remote control**

When one of the source buttons on the remote control is pressed, the corresponding input will be activated.

### **Adjusting the Volume**

 
 
 

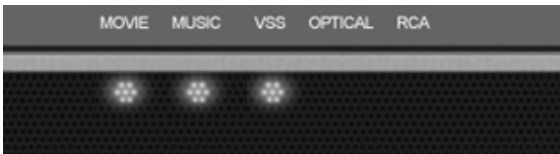 
- Press VOL + to increase the volume level.
- Press VOL - to decrease the volume level.



# Adjusting Volume

## Adjusting the Bass Volume

Press BASS - / BASS + repeatedly to adjust the bass volume level

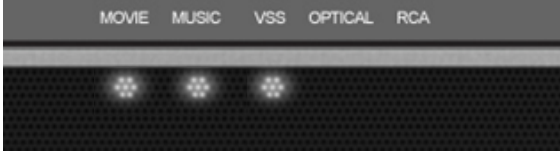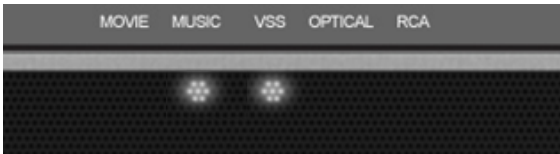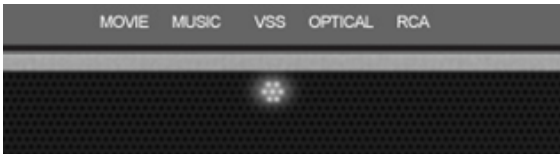	MOVIE	MUSIC	VSS	OPTICAL	RCA	NOTE
-3						LED flashes 3 times to indicate minimum bass volume has been reached
-2						
-1						
0						
+1						
+2						LED flashes 3 times to indicate maximum bass volume has been reached
+3						

### Note:

- You can adjust the Bass volume level from -3 ~ +3.
- The factory default value of the Bass volume is 0.

# Adjusting Volume

## Adjusting the Treble Volume

Press TREBLE - / TREBLE + repeatedly to adjust the treble volume level.

	MOVIE	MUSIC	VSS	OPTICAL	RCA	NOTE
-3						LED flashes 3 times to indicate minimum treble volume has been reached
-2						
-1						
0						
+1						
+2						LED flashes 3 times to indicate maximum treble volume has been reached
+3						

### Note:

- You can adjust the Treble volume level from -3 ~ +3.
- The factory default value of the Treble volume is 0.

# Troubleshooting

---

	<b>SYMPTOM</b>	<b>CHECK</b>
<b>GENERAL</b>	There is no power	<p>Check that the power cord is securely connected.</p> <ul style="list-style-type: none"> <li>• Press POWER button on the remote and ensure that one of the LED indicator on the main unit is ON.</li> <li>• Plug another working device to the same outlet to ensure that the outlet is working correctly.</li> </ul>
<b>SOUND</b>	There is no sound coming from the main unit.	<ul style="list-style-type: none"> <li>• Increase the volume using VOL+ button on the remote.</li> <li>• Press MUTE to deactivate the muting function.</li> <li>• Check that the main unit and device are connected correctly and securely.</li> <li>• Check that both the main unit and the selected device are turned on.</li> <li>• Press SPDIF or AUX to ensure the selected mode is correct.</li> <li>• Check your TV setting on audio output setting to make sure external speaker is selected. Consult your TV user guide for more details</li> </ul>
	Buzzing or humming is heard from the soundbar system.	<ul style="list-style-type: none"> <li>• Check that both ends of the cable are connected securely.</li> <li>• Test the cable on an alternate device and replace it if the same problem occurs.</li> <li>• Connect the source device to different input on the soundbar</li> </ul>

# Specifications

---

## **General**

<b>INPUTS/OUTPUTS SPEC</b>	
AC Input	100VAC~250VAC 50/60Hz
S/PDIF IN (OPTICAL)	1 Optical jack
AUX IN	1 Stereo RCA jack (L+R)
Speaker Output	2Way Woofer 2ea, Tweeter 2ea
<b>MECHANICAL SPEC</b>	
Dimensions (W x H x D)	84 x 5.5 x 7 cm
Net Weight	1.38 kg
Output power	25W x 2 = 50W
S/N Ratio	70dB

## THE SOURCE – WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.



Imported by:  
The Source,  
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

For product support please visit  
[www.thesource.ca](http://www.thesource.ca)



Please Recycle

© 2013 The Source  
All rights reserved.